PHILIPS

Quick Use Guide

DVP3055V

SgpSL/0508/05_1

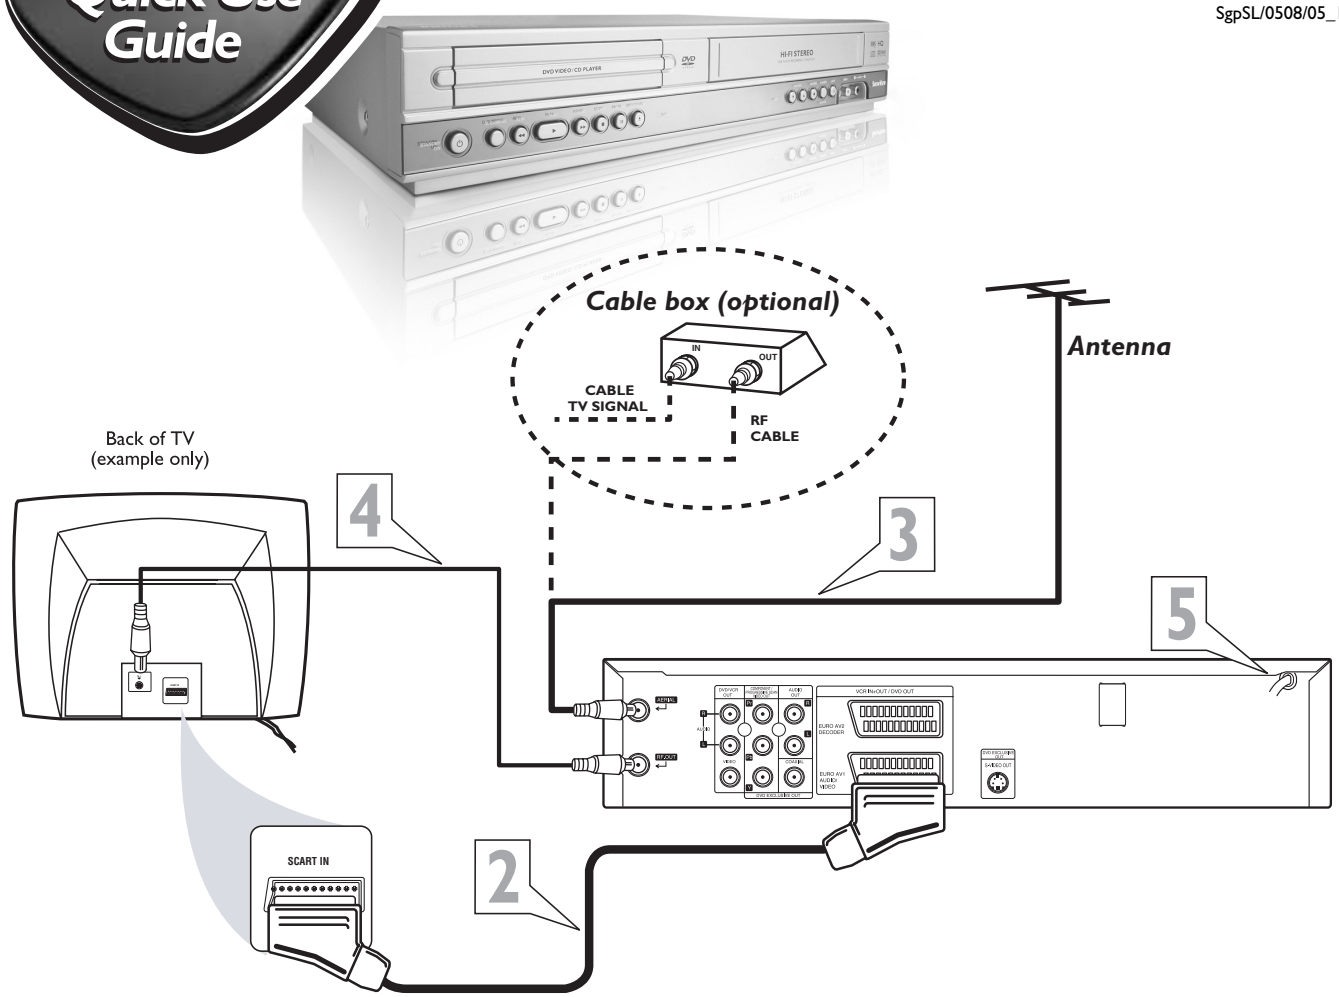

1 **Disconnect all equipment from the power outlets.** Connect the equipment to the power outlets only after you have finished hooking up everything. Never make or change connections with equipment connected to the power outlet.

2 **Connect the EURO AV1 AUDIO/VIDEO on the rear panel of this DVD/VCR to the SCART input on the TV using the SCART cable.**

3 **Connect your existing RF cable from the Antenna TV signal directly to the AERIAL jack on the rear of the DVD/VCR.**
If you have a Cable Box (or Satellite Receiver), connect the OUT jack of the Cable Box/Satellite Receiver to the AERIAL jack on the DVD/VCR using an RF coaxial cable (not supplied).

4 **Connect the supplied black RF cable to the DVD/VCR's RF-OUT jack and to your TV's ANTENNA IN jack.**
The TV's ANTENNA IN jack could be labelled 75-ohm, TV IN, or RF IN. Check your TV manual for details.

5 **Connect the power cords of the DVD/VCR, TV, and Cable Box (if applicable) to a power outlet.**

6 **Turn on the TV power. Set the TV to a video channel.** (See the accompanying DVD/VCR owner's manual for details.)

7 **Press STANDBY-ON/POWER ⏻ on the DVD/VCR or its remote to turn on the DVD/VCR.** The first time you turn on the DVD/VCR, you should complete the VCR setup. See the other side of this Quick-Use Guide for details.

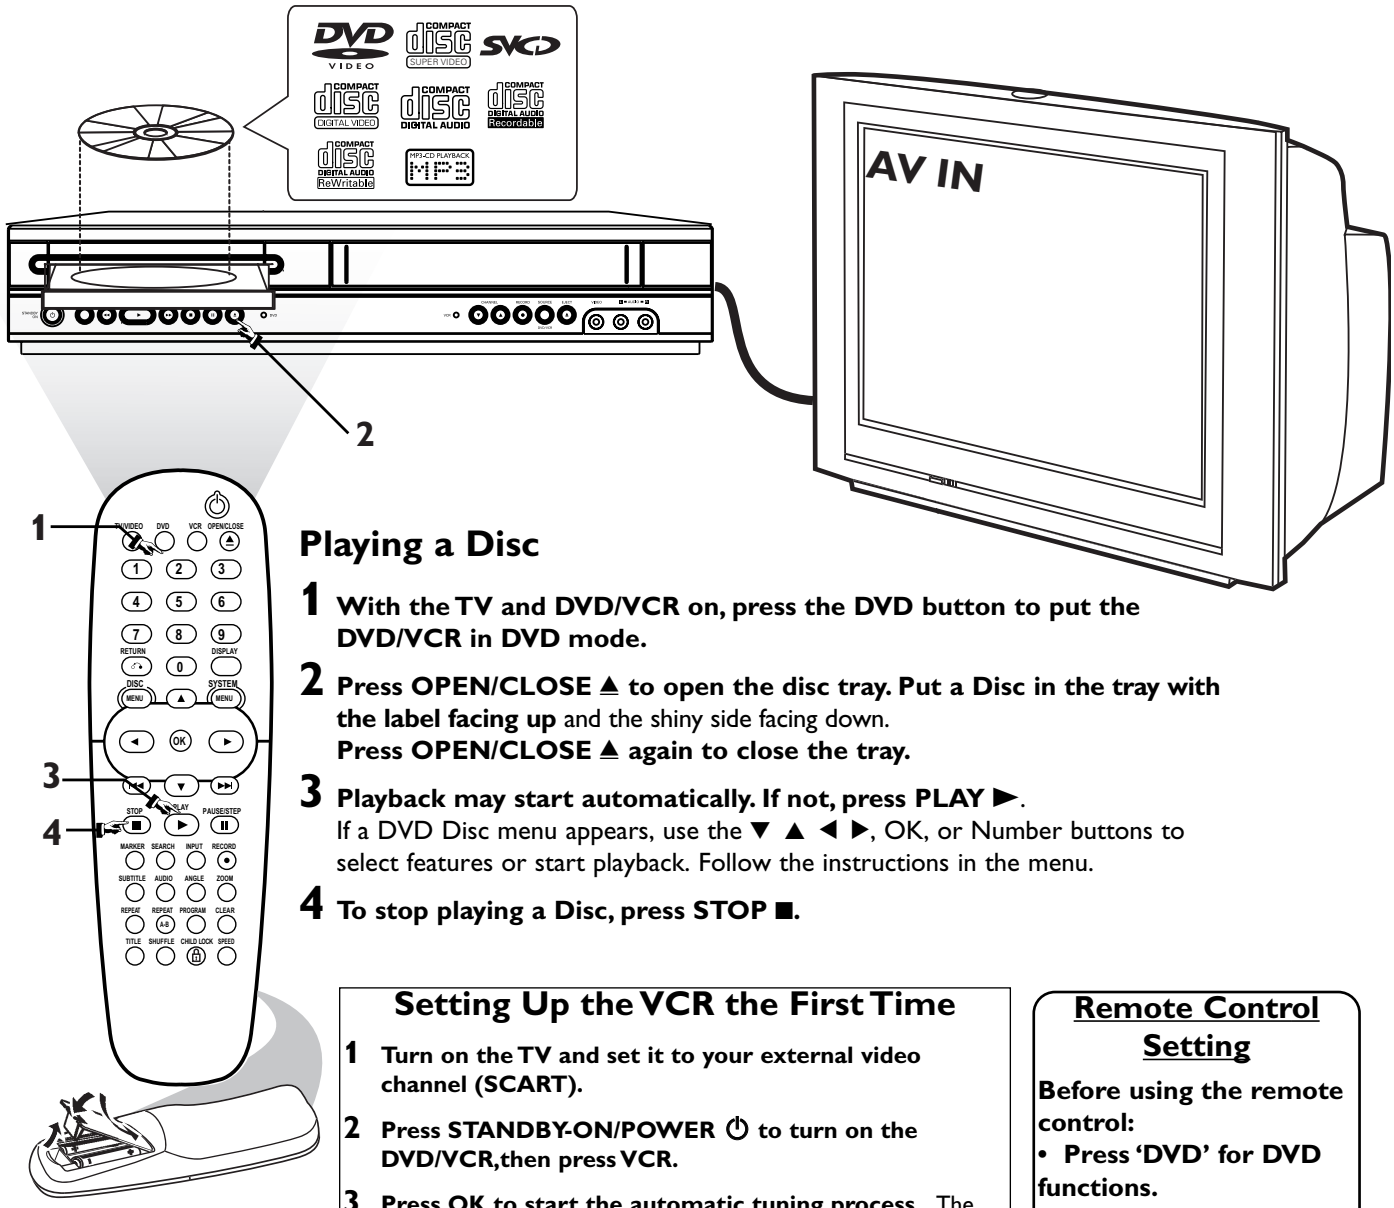

Playing a Disc

1 **With the TV and DVD/VCR on, press the DVD button to put the DVD/VCR in DVD mode.**

2 **Press OPEN/CLOSE ▲ to open the disc tray. Put a Disc in the tray with the label facing up** and the shiny side facing down.
Press OPEN/CLOSE ▲ again to close the tray.

3 **Playback may start automatically. If not, press PLAY ►.**
If a DVD Disc menu appears, use the ▼ ▲ ◄ ►, OK, or Number buttons to select features or start playback. Follow the instructions in the menu.

4 **To stop playing a Disc, press STOP ■.**

Setting Up the VCR the First Time

1 **Turn on the TV and set it to your external video channel (SCART).**

2 **Press STANDBY-ON/POWER ⏻ to turn on the DVD/VCR,then press VCR.**

3 **Press OK to start the automatic tuning process.** The TV station stored may vary according to the area you live in.

4 **Press SYSTEM MENU to remove the menus from the TV screen.**

Remote Control Setting

Before using the remote control:

- **Press 'DVD' for DVD functions.**
- **Press 'VCR' for VCR functions.**

Region Codes

DVDs must be labeled for ALL regions or for Region 2 in order to play on this DVD system.



No picture?

Check the AV (Audio/Video) mode on your TV.

* Usually this channel is between the lowest and highest channels and may be called FRONT, A/V IN, or VIDEO.
* Or, you may go to channel 1 on your TV, then press the Channel down button repeatedly until you see the Video In channel.
* Or, your TV remote control may have a button or switch that chooses different video modes.
* See your TV manual for more details.

Detailed playback features and additional functions are described in the accompanying owner's manual.